

S&S® engines shipped are currently configured for "head breathing" with reed valve breather installed. If converting to "case breather", a standard rotary breather needs to be installed.



S&S® engines shipped are currently configured for "head breathing" with reed valve breather installed. If converting to "case breather", a standard rotary breather needs to be installed.

S&S Cycle #510-0030 S&S Cycle #510-0030



S&S® engines shipped are currently configured for "head breathing" with reed valve breather installed. If converting to "case breather", a standard rotary breather needs to be installed.



S&S® engines shipped are currently configured for "head breathing" with reed valve breather installed. If converting to "case breather", a standard rotary breather needs to be installed.

S&S Cycle #510-0030