

Instruction 510-0078

06-18-12

Copyright © 2012
by S&S® Cycle, Inc.

All rights reserved.
Printed in the U.S.A.

S&S® Cycle, Inc.

14025 Cty Hwy G PO Box 215
Viola, Wisconsin 54664

Phone: 608-627-1497 • Fax: 608-627-1488

Technical Service Phone: 608-627-TECH (8324)


Technical Service Email: sstech@sscycle.com

Website: www.sscycle.com




Special S&S Stealth Air Cleaner Back Plate Installation Instructions for S&S Throttle Hog Throttle Bodies using Muscle Air Cleaner Kit Addendum to S&S Instruction Sheet 510-0059

1- This step should only be done if you are installing the S&S Muscle cover on an S&S Throttle Hog throttle body. Remove the lanyards from the supplied gasket by squeezing the rivets on the small end with a pair of pliers as illustrated in **Picture 1, below left**. This gasket will not be needed for the installation on the Throttle Hog throttle bodies.

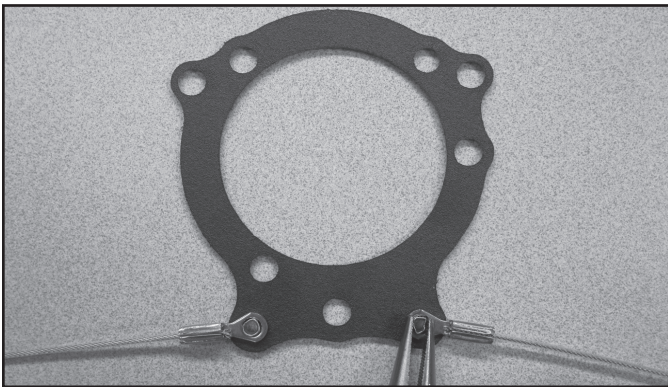

Picture 1

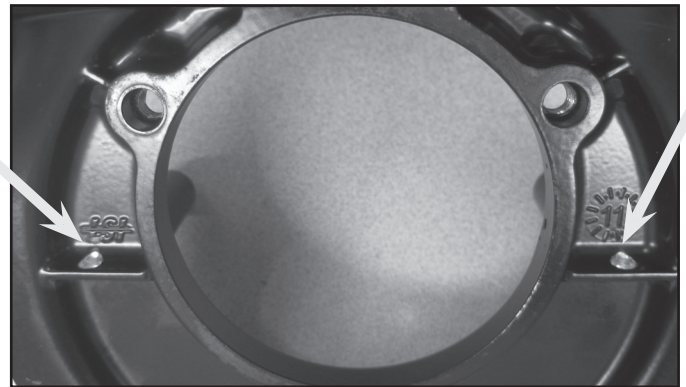


Picture 2

2- Drill one 1/8" diameter hole in each of the support ribs next to the bore of the S&S Stealth back plate as shown in **Picture 2, above right**.

NOTE: Take special care to not drill into the air cleaner portion of the cover nor so close to the edge of the rib that the hole breaks out.

3- Attach the lanyards to the back plate as shown in **Picture 3, below**, with two small zip ties or safety wire.

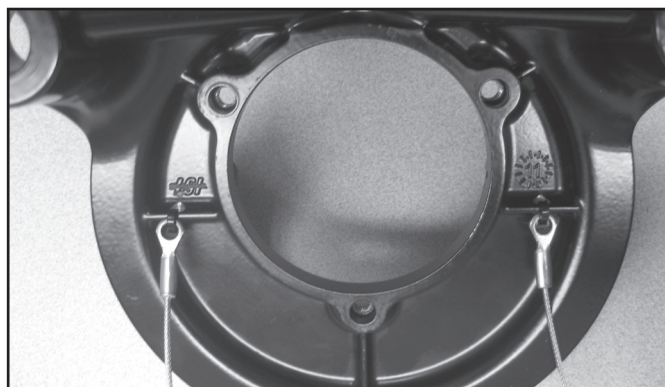

Picture 3

4- Follow the existing S&S instructions 510-0055 and 510-0059 supplied with your Stealth Air Cleaner Kit and Muscle AC Cover Kit for installing the back plate, Stealth AC kit, and Muscle AC Cover.